
ARMATURE INSTALLATION INSTRUCTIONS
Two Leg Armature

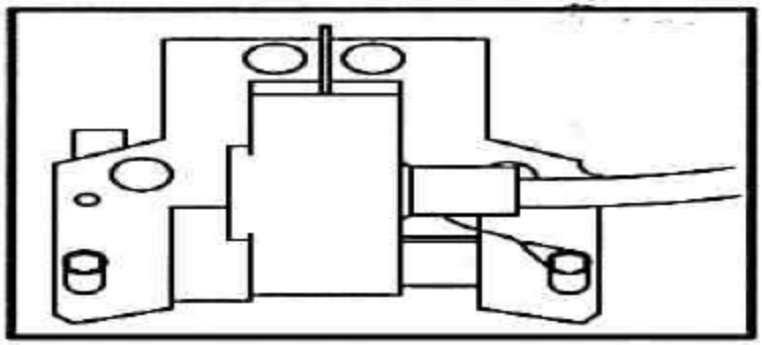

Use this instruction tag, MS-1342, (.010"/.25mm) between the flywheel and armature.


1. Rotate flywheel until magnets are opposite armature mounting area. Install armature loosely.
2. Pull armature away from flywheel. Lightly tighten mounting screws
3. Rotate flywheel until magnets are below armature legs. Insert proper tag(s) between armature and flywheel.
4. Loosen armature screws. This allows magnet to pull armature legs onto tag(s).
5. Tighten armature mounting screws.
6. Rotate flywheel to remove tag(s).

If ignition cable terminal is not attached, see other side for installation procedure.

Tag Thickness .010"/.25 mm

ATTACHING IGNITION CABLE TERMINAL

IF NECESSARY, CUT CABLE TO DESIRED LENGTH TO REACH SPARK PLUG. DO NOT CUT TOO SHORT.

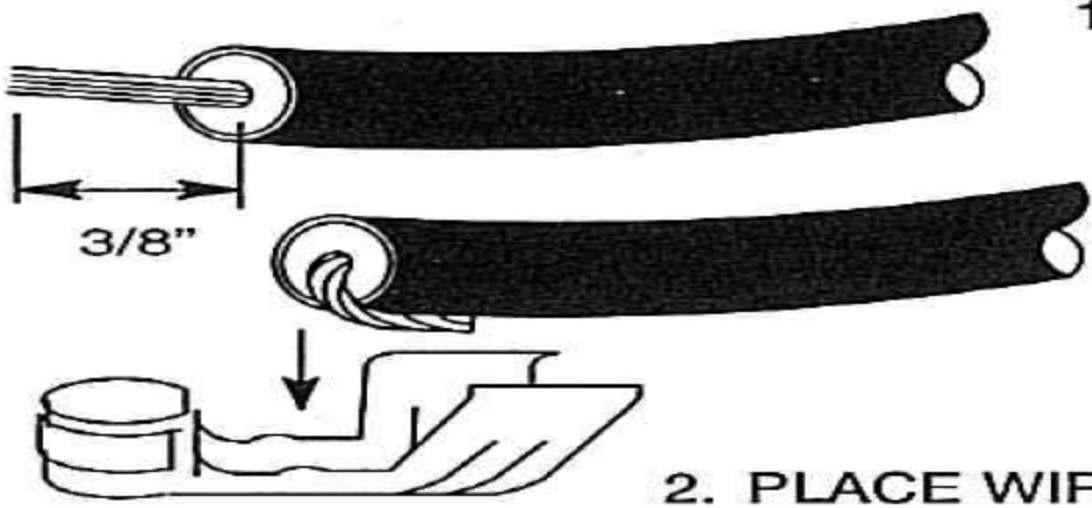


1. STRIP 3/8" OF INSULATION FROM END. TWIST WIRE AND FOLD BACK AS SHOWN

2. PLACE WIRE AGAINST TERMINAL AND FOLD WINGS OF TERMINAL OVER WIRE. CLINCH TIGHT.





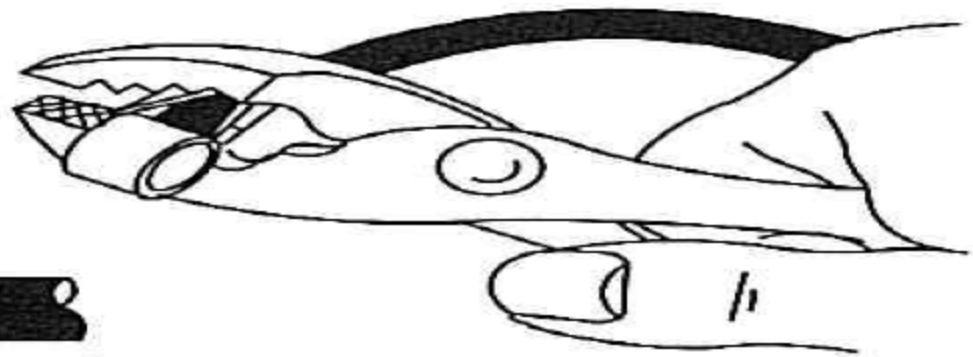

Tag Thickness .010"/.25 mm

PRINTED IN USA FORM MS-1342-3/93